

CASTLEMAINE **ROD SHOP**

SINCE 1976


V6 Holden Power Steering Delete kit.

1. Unbolt Old Power Steering Pump and Factory Pulley, If the power steering bracket has the “Star” casting pattern you will need to grind it flat to allow the new idler to fit.




The second photo shows the clearance needed for idler to fit.


2. Bolt New Rod Shop Idler Assembly where the Power Steering Pump was and fit Supplied Belt. (as shown in the diagrams)

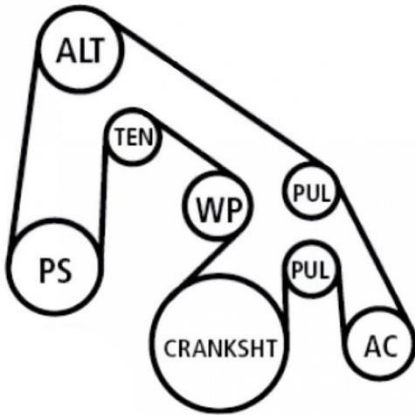


VS-VY Eco Tec V6 – With Aircon.

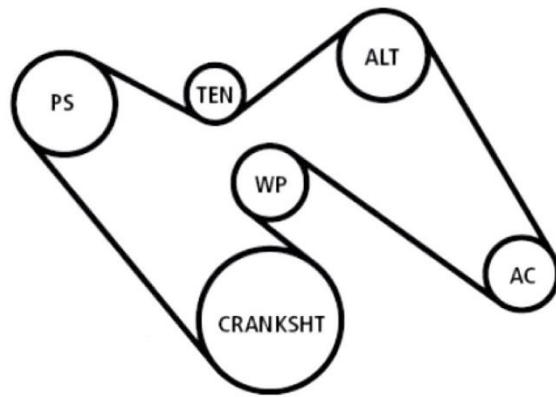

VN-VR Non Eco Tec V6 – With Aircon.

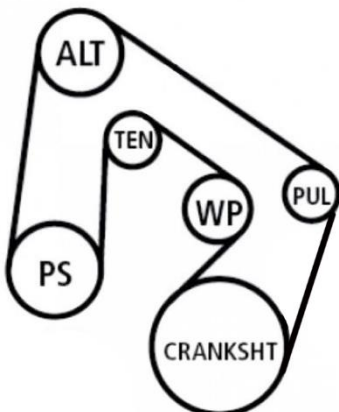

VS-VY Eco Tec V6 Without Aircon.

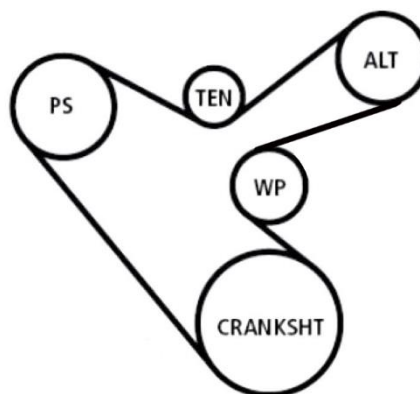

VN-VR Non Eco Tec V6 Without Aircon.